

ALL ABOUT
GAME
INC.



Model # AAG360BTX
5 Hub Style Hunting Ground Blind
All About Game Camo 2007



All Bout Game, Inc.
8915 N. Pioneer Road
Peoria, IL 61615
(309) 691-2930 www.allaboutgame.com
Made in China

WARNING!

- FOR YOUR SAFETY BE SURE TO READ ALL INSTRUCTIONS CAREFULLY.
- THIS HUNTING BLIND USES FIRE RESISTENT MATERIAL, THIS MATERIAL IS NOT FLAME PROOF.
- DO NOT ALLOW ANY HEAT OR OPEN FLAMES TO COME IN CONTACT WITH THE MATERIAL OF THIS HUNTING BLIND.
- DO NOT USE A HEATER IN BLIND. UNVENTED FUMES CAN CAUSE SICKNESS OR DEATH.
- DO NOT SHOOT AN FIREARM THOUGH THE SHOOT THROUGH SCREENS, THE MUZZLE FLASH COULD IGNIGTE THE SCREEN MATERIAL
- DO NOT USE EXPANDABLE BROADHEADS WITH SHOOT-THROUGH SCREENS, THE BLADES MAY OPEN PREMATURELY. USE FIXED BLADE BROADHEAD USE ONLY
- DO NOT ALLOW CHILDREN TO PLAY WITH THIS BLIND WITHOUT ADULT SUPERVISION.
- NEVER COVER YOUR FACE WITH THE BLIND MATERIAL. IT CAN CAUSE SUFFOCATION AND DEATH.
- REMOVE ALL GROUND STAKES BEFORE ATTEMPTING TO FOLD UP BLIND, GROUND STAKES MAY TEAR THE BLIND OR CARRYING CASE

CARTON CONTENTS:

1	Hunting Blind	
1	Back Pack Carrying Case	Part# 518
12	Ground Stakes	Part# 526
1	Ground Stake Bag	Part# 519
4	Tie-Down Cords	Part# 520
8	Blur 60" x 22" Split Shoot through Screens	Part# 453X

Replacement Parts:

Hub	Part# 540
Hub Eye-Bolt	Part# 541
Hub Washer	Part# 542
Pole	Part# 544

SET UP

1



STEP 2

Locate one wall hub. (A hub is the part that joins four poles together) A wall hub will have two of the four poles extended to an edge of the fabric. Hold the hub in one hand and place your foot on the other hubs. With your other hand grab the center stake loop between the poles at the edge of the fabric. Push the hub out firmly until the wall pops open. (Illustration 2)

2



P 1

All Bout Game, Inc.
8915 N. Pioneer Road
Peoria, IL 61615
(309) 691-2930
www.allaboutgame.com
Made in China

STEP 3

Locate the hub for the roof. The hub for the roof will not have any poles extending to the bottom edge of the fabric. Be sure hubs for walls not opened are close together. While holding hub of wall already opened in one hand, firmly push the roof hub outward with your other hand until it pops open. (Illustration 4 and 5)



STEP 4

Now pop out the remaining three walls by firmly pushing the hubs outward from the inside of the blind. (Illustrations 6, 7, and 8)



STEP 5

For windy conditions it is recommended that you use the adjustable tie-down cords and stakes to secure the blind. Insert the ground stakes through the attached loops on the bottom of the blind. Secure adjustable tie-down cords with stakes and adjust the cords tight. (Illustration 9)



All Bout Game, Inc.
8915 N. Pioneer Road
Peoria, IL 61615
(309) 691-2930 www.allaboutgame.com
Made in China

Tie-down Cord

1



STEP 1

Use the adjustment buckles and adjust the cords to match the pictures. (Illustration 1)

STEP 2

Tie the tie-down rope on the outside of the blind to the eyebolt in the center of the hub. Insert the stake through the loop at the end of the tie-down rope. Press the stakes into the ground; adjust the buckle as needed to secure the blind. (Illustration 2)

2



Tear Down

STEP 1

Remove all stakes and tie down cords. Then stand inside of the blind and pull in the hubs for three of the walls. (Illustration 1 and 2)

1



2



3



4



STEP 2

Grab the hub of the roof in one hand and the hub of the wall still standing in the other. Pull in on the hub for the roof until it pops and swing the wall hub over your head. Pull in the hub of the last wall as you bring the blind over your head. (Illustrations 3 and 4)

STEP 3

Fold all of the poles together with the black side out, so the blind will fit back into the carrying case. (Illustration 5)

5



Storage

- Never store a wet or damp blind in its carrying case. Make sure blind is completely dry before storing.
- Be sure blind is free of debris before packing into carrying case.
- Store blind in a dry and cool place.



All Bout Game, Inc.
8915 N. Pioneer Road
Peoria, IL 61615
(309) 691-2930 www.allaboutgame.com
Made in China