



Model AGT625 ST410

Max. Capacity: 500 lbs.
500 pounds including 2- persons and gear
300 pounds including 1- person and gear
Platform Size: 4 ft. x 4 ft.
Seat Height: 19-inches

Congratulations on your purchase of an Advanced Game Technology Global tripod stand! The following information is included in your instructions.

- Safety and instructions
- Warnings
- Container contents
- Assembly instructions
- Maintenance and care instructions

Warning

Maximum Weight Capacity:

Max. Capacity: 500 lbs.

500 pounds including 2- persons and gear
300 pounds including 1- person and gear

DANGER:

DO NOT use this shooting house tower without securing it to the ground.

DO NOT use before reading and understanding the instructions included with this shooting house tower.

DO NOT use your shooting house tower while under the influence of medication, alcohol, or drugs or if you experience dizzy spells, heart problems, or have a fear of heights.


DO NOT use this shooting house tower during inclement weather.

WARNING:

Before each use, always inspect this shooting house tower for undue wear, deformity, corrosion or other visible damage.



ALWAYS: Make sure that you are comfortable and fully understand the proper use and installation of the AGT625 shooting tower.

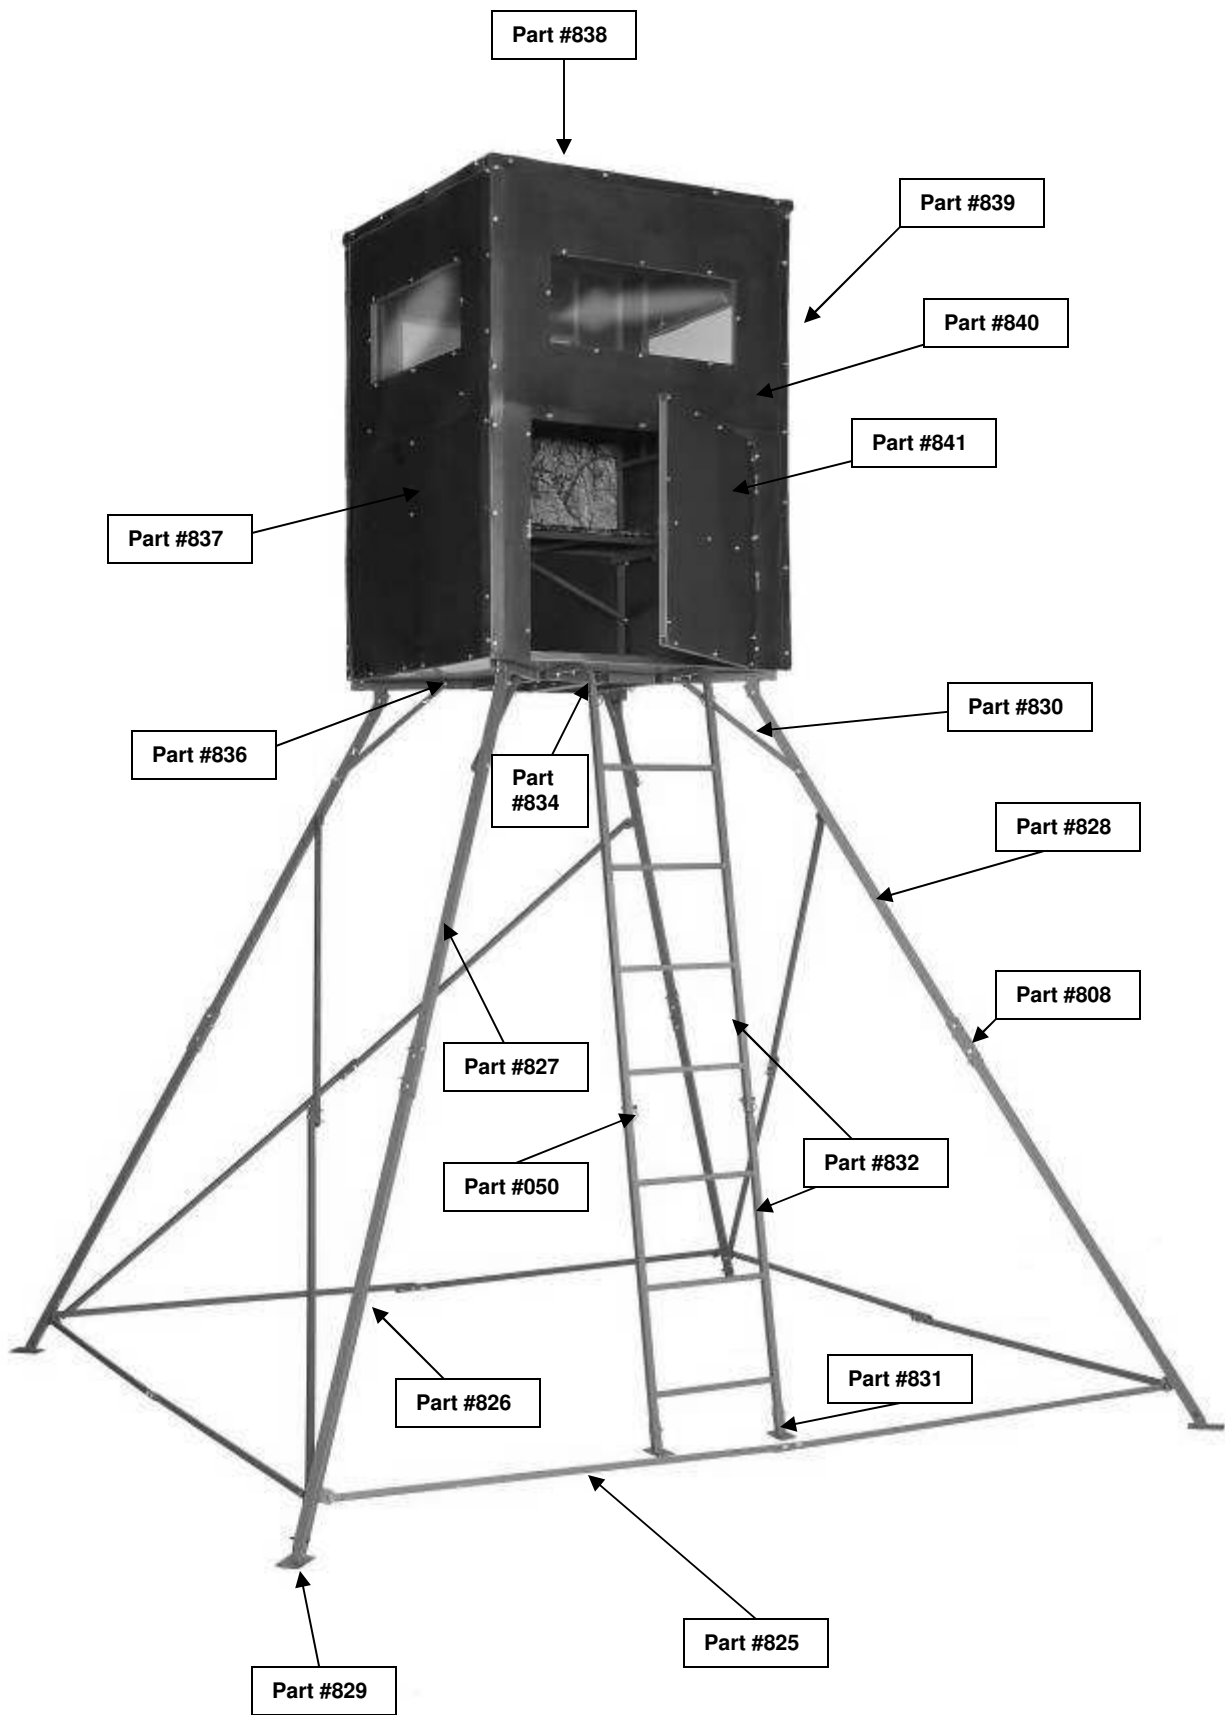

Model: AGT625 Shooting House Tower

Max. Capacity: 500 lbs.

500 pounds including 2- persons and gear

300 pounds including 1- person and gear

CARTON CONTENTS: AGT625

14	Leg Cross Brace	Part # 825
4	Bottom Leg Section	Part # 826
1	Top Leg Section	Part # 827
3	Top Leg Section w/ Cross Brace Tab	Part # 828
8	Leg Bracket	Part # 808
4	Leg Foot	Part # 829
4	Platform Brace	Part # 830
2	Ladder Foot	Part # 831
2	5ft. Ladder Section	Part # 832
2	Ladder Attachment	Part # 834
2	Platform Base Bar	Part # 842
2	Platform Base	Part # 835
1	Platform Plastic Floor	Part # 836
1	Front Wall Cover	Part # 840
1	Door Cover	Part # 841
1	Left Wall Cover	Part # 837
1	Back Wall Cover	Part # 833
1	Right Wall Cover	Part # 839
1	Roof Cover	Part # 838
1	Door Frame With Hinge	Part # 889
1	Door Frame With Latch	Part # 890
1	Door Frame Vertical Bar w/ Hinge	Part # 854
1	Door Frame Vertical Bar	Part # 855
1	Black Seat Cushion	Part # 843
1	Seat Frame	Part # 844
1	Right Seat Support	Part # 894
1	Left Seat Support	Part # 895
1	Seat Support Brace	Part # 846
1	Left Front Wall Vertical Support Bar	Part # 897
1	Right Front Wall Vertical Support Bar	Part # 898
1	Front Horizontal Support	Part # 833
1	Rear Horizontal Support	Part # 849
2	Side Horizontal Support	Part # 850
10	Roof / Window Bar	Part # 851
1	Roof Cross-bar	Part # 852
2	Roof Bar With Bolt Hole	Part # 853
1	Front Platform Section	Part # 858
1	Rear Platform Section	Part # 859
2	Seat Horizontal Support	Part # 847

Hardware:

4	2 inch locking pin	Part # 050
26	8mm x 1-Inch Bolt	Part # 014
15	8mm x 1 1/2-Inch Bolt	Part # 011
10	8mm x 1 3/4-Inch Bolt	Part # 005
15	8mm x 2 Inch Bolt	Part # 006
45	8mm x 2 1/4-Inch Bolt	Part # 008
8	8mm x 2 1/2-Inch Bolt	Part # 002
2	8mm x 2 3/4-Inch Bolt	Part # 010
16	8mm x 3 Inch Bolt	Part # 009
4	8mm x 4 1/4 Inch Bolt	Part # 015
141	8mm Locknut	Part # 003
282	8mm Steel washer	Part # 004

Warning: This shooting house tower requires four or more people to safely set up. Never try and set up this shooting house tower by yourself or with less than four people.



Advanced Game Technology Inc.
6818 N. Frostwood Parkway
Peoria, IL 61615
309-691-2950
www.advancedgametechnology.com

Maintenance & Care

To ensure your safety, inspect your treestand before each use. Never use the treestand if damage is detected or suspected.

Regular maintenance by the user includes, but is not limited to the following:

Tightening or replacement of hardware (specified and supplied by the manufacturer).

Replacement of rope, straps, cables, etc. (specified and supplied by the manufacturer).

Advanced Game Technology Global, Inc., LIMITED WARRANTY

What This Warranty Covers:

Advanced Game Technology Global, Inc. treestand products are covered against defects in workmanship and materials for a period of one (1) year from the original date of purchase.

Advanced Game Technology Global, Inc. will replace without charge any original part determined by Advanced Game Technology Global, Inc. to be defective under the terms of this warranty.

What This Warranty Does Not Cover:


Lost parts; accidents; malfunctions caused by alterations, improper installation, use of unauthorized parts or attachments; damages due to abuse/misuse; normal wear; excessive wear caused by owners neglect; or products that are put to commercial/rental use.

Statement of Liability




It is expressly understood that Advanced Game Technology Global, Inc.'s, liability for its products, whether due to breach of warranty, negligence, strict liability, or otherwise, is limited to the repair or replacement of any defective parts within the one (1) year time limit mentioned above. Advanced Game Technology Global, Inc. is not liable for any injury or expense, whether direct or consequential, including but not limited to loss of use, income, profit or damage to material arising in connection with the sale, installation, use of, inability to use, or the repair or replacement of Advanced Game Technology Global, Inc., products. Advanced Game Technology Global, Inc., reserves the right to make alterations or modifications in its products at any time, which in its opinion may improve the performance and efficiency of the product. It shall not be obligated to make such alterations or modifications to products already in service.

Advanced Game Technology Global, Inc. treestands are delivered by Advanced Game Technology Global, Inc., with the understanding that Advanced Game Technology Global, Inc., assumes no responsibility for its resale or safe use.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. You should check the State Laws to see if they apply.

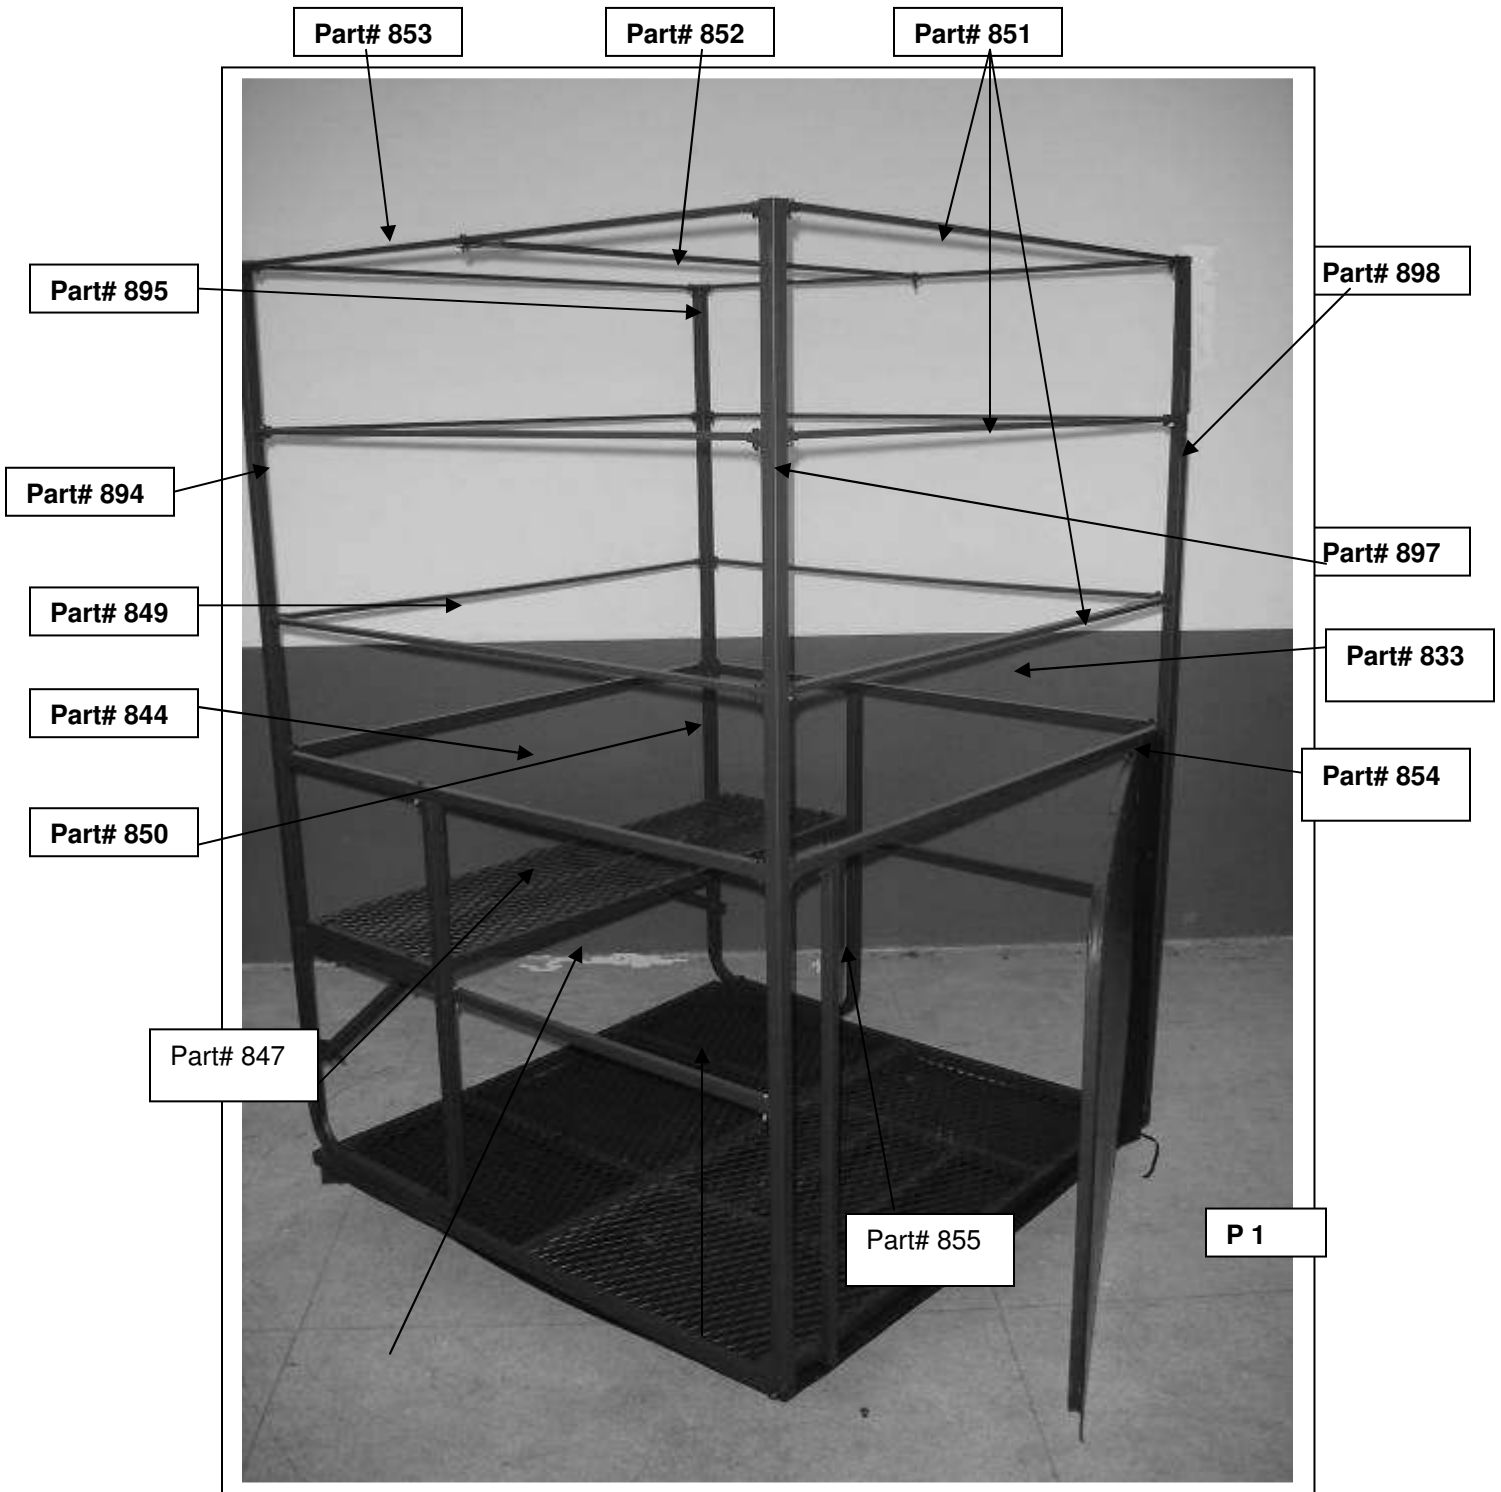

**ASSEMBLY (platform section)
AGT625**

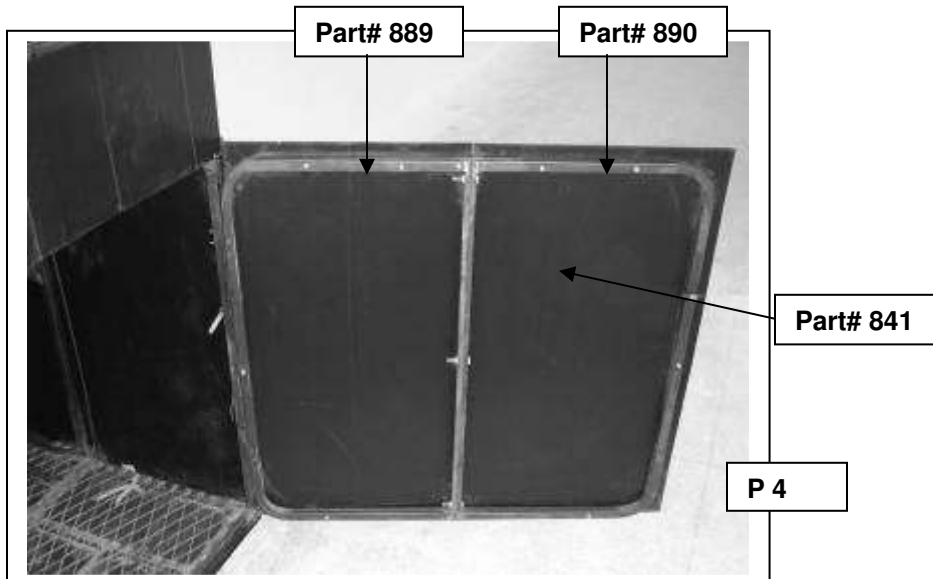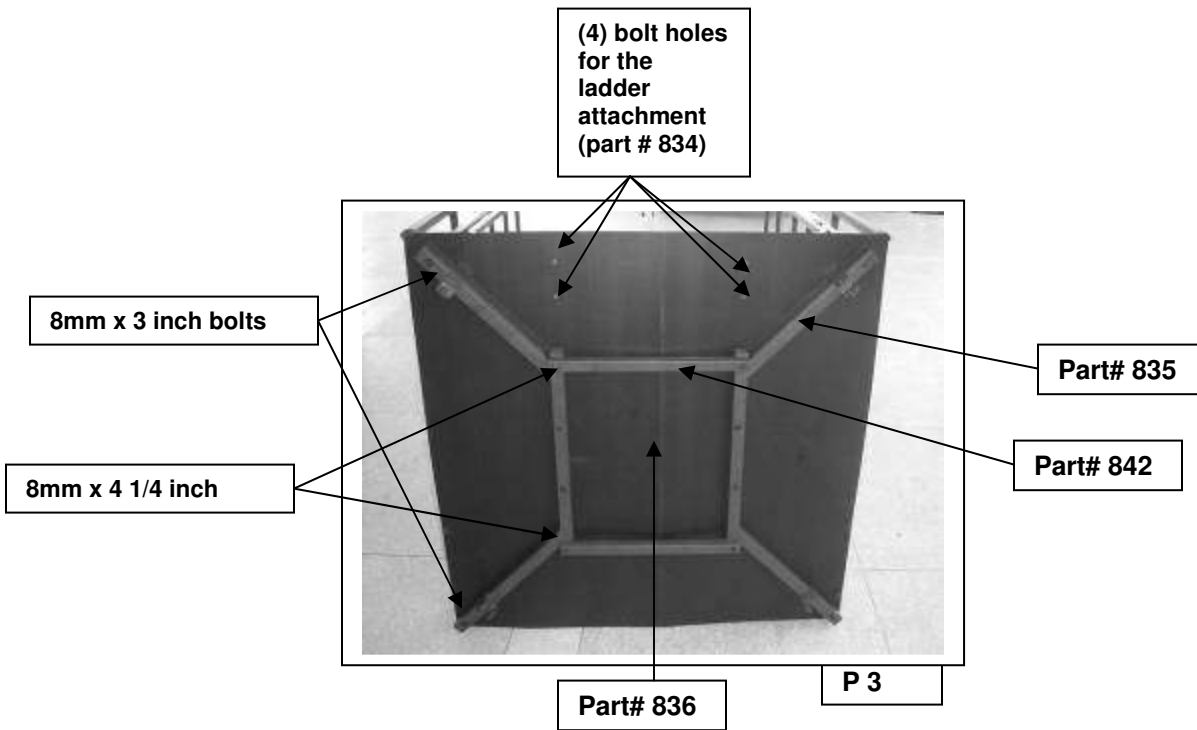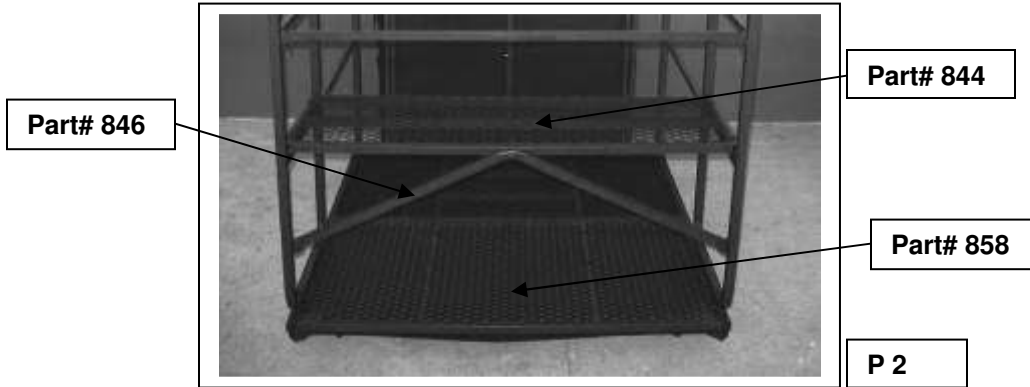



ASSEMBLY (platform section)

AGT625

1. To assure that all parts will fit together when assembling the top section of the shooting house tower, hand tighten all locknuts and bolts.
2. Assemble the front platform section (part# 858), rear platform sections (part# 859), using (6) 8mm x 2 inch bolts (12) 8mm steel washers and (6) 8mm locknuts
3. Bolt the right front wall vertical support bar (part# 898) and the left front wall vertical support bar (part# 897) to the front of the platform, using (2) 8mm x 1 ½ inch bolts, (4) 8mm steel washers and (2) 8mm locknuts. (make sure the bolt tabs are on the inside). (picture 1 and 2)
4. Bolt the right seat support (part# 894) and the left seat support (part# 895) to the rear platform, using (4) 8mm x 2 inch bolts, (8) 8mm steel washers and (4) 8mm locknuts. (make sure the bolt tabs are on the inside). (picture 1 and 2)
5. Bolt the seat frame (part# 844) to the left and right seat support and seat support brace, using (5) 8mm x 2 inch bolts, (10) 8mm steel washers and (5) 8mm locknuts. (picture 1 and 2)
6. Bolt the seat support brace to the back of each of the left and right seat support, using (2) 8mm x 1 1/2 inch bolts, (4) 8mm steel washers and (2) 8mm locknuts. (picture 2)
7. Bolt the rear horizontal support (part# 849), front horizontal support (part# 833) and the side horizontal support (part# 850) to the left and right seat support and left and right front wall vertical support bar, using (10) 8mm x 1 1/2 inch bolts, (20) 8mm steel washers and (10) 8mm locknuts. (picture 1)
8. Bolt the seat horizontal support (part# 847) to the front of each of the left and right seat support, and inside of each of the left and right front wall vertical support bar using (4) 8mm x 1 1/2 inch bolts, (8) 8mm steel washers and (4) 8mm locknuts. (picture 1)
9. Bolt the (10) roof / window bar (part# 851) to the left and right seat support and left and right front wall vertical support bar, using (20) 8mm x 1 inch bolts, (40) 8mm steel washers and (20) 8mm locknuts. (picture 1)
10. Bolt the (2) roof bars (part# 853) to the left and right seat support and left and right front wall vertical support bar, using (4) 8mm x 1 inch bolts, (8) 8mm steel washers and (4) 8mm locknuts. (picture 1)
11. Bolt the roof cross bar (part# 852) to the (2) roof bars, using (2) 8mm x 1 inch bolts, (4) 8mm steel washers and (2) 8mm locknuts. (picture 1)
12. Tip the shooting house top section on to its side. (picture 3)
13. Align the bolt holes on the platform and the platform plastic floor (part# 836), making sure the (4) bolt holes for the ladder attachment (part # 834) are to the front. Bolt the ladder attachment to the bottom of the platform, using (4) 8mm x 2 ½ inch bolts, (8) 8mm steel washers and (4) 8mm locknuts. (picture 3)
14. Align the platform, platform plastic floor and the (2) platform base (part# 835), using (8) 8mm x 3 inch bolts, (16) 8mm steel washers and (8) 8mm locknuts. (picture 3)
15. A-line the platform base bar (part# 842) and the (2) platform bases, using (4) 8mm x 4 1/4 inch bolts, (8) 8mm steel washers and (4) 8mm locknuts. (picture 3)
16. Tighten all locknuts and bolts except the bolts that hold the platform bases and platform base bars.


17. Bolt the door frame vertical bars (part# 854) and (part#855) to the front platform, using (2) 8mm x 2 inch bolts (4) 8mm steel washers and (2) 8mm locknuts (picture 1)
18. Bolt the door frame vertical bars (part# 854) and (part#855) to the front horizontal support, using (2) 8mm x 1 1/2 inch bolts (4) 8mm steel washers and (2) 8mm locknuts (picture 1)
19. Bolt the doorframe with hinge (part# 889) and the doorframe with latch (part# 890) together, using (3) 8mm x 1 1/2 inch bolts, (6) 8mm steel washers and (3) 8mm locknuts. (picture 4)

**ASSEMBLY (wall covers)
AGT625**

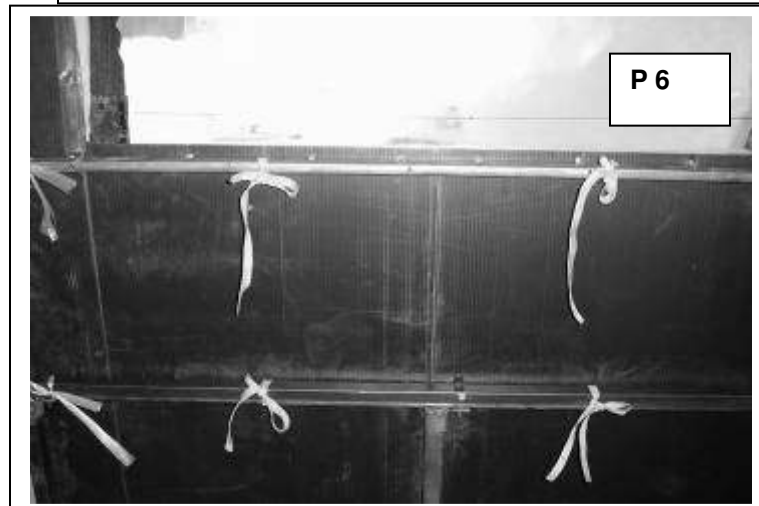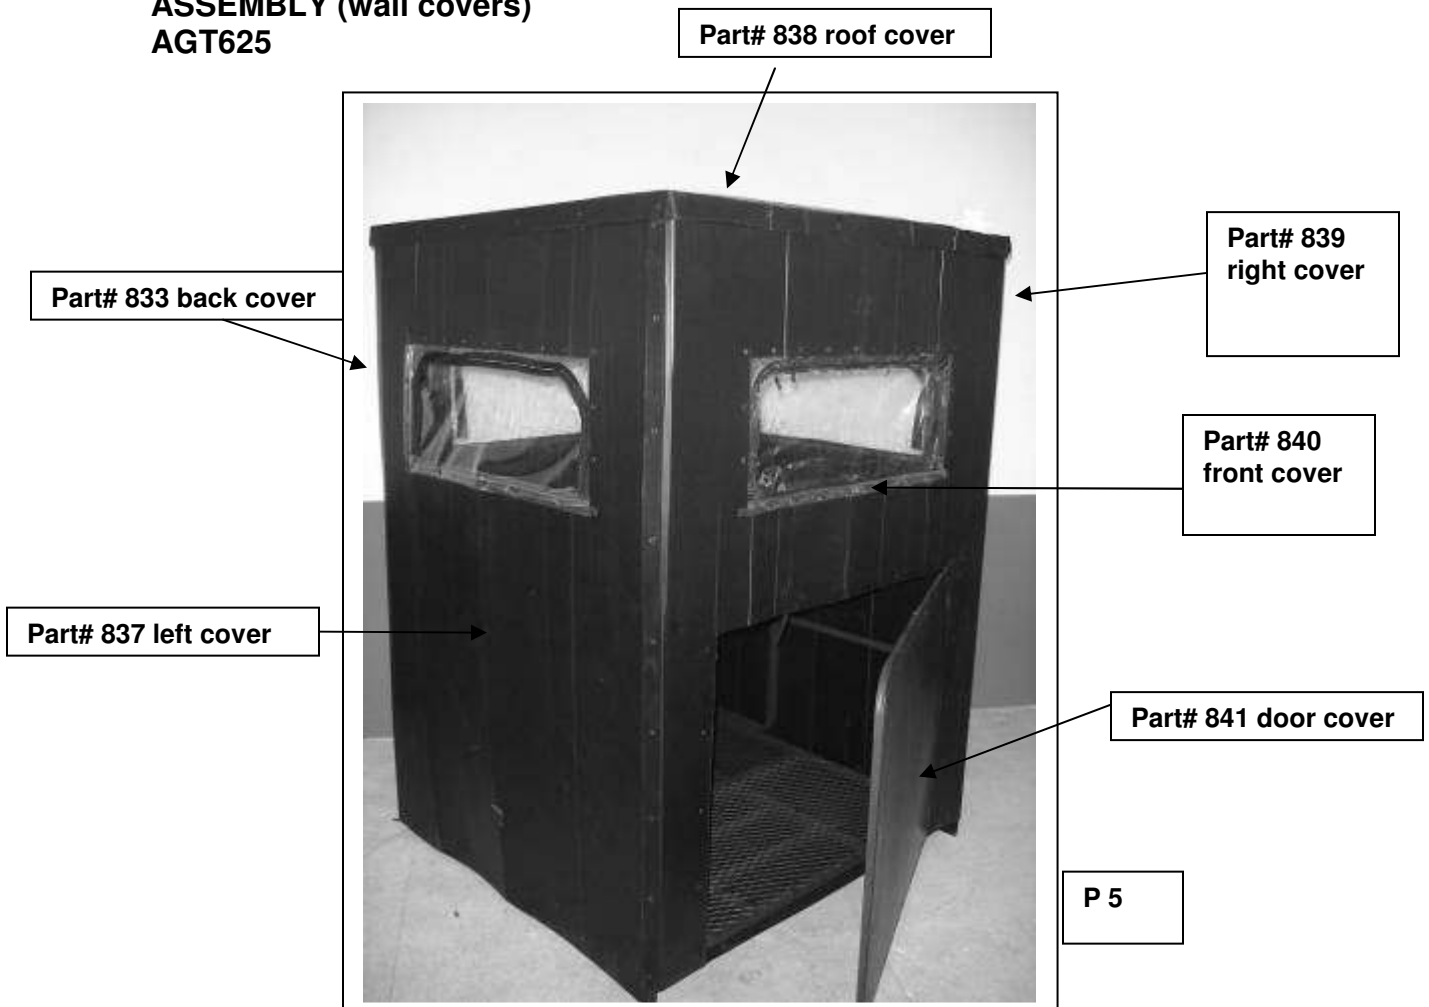


ASSEMBLY (wall covers) AGT625

20. Align the windows of each wall with the roof / window bars, tie all the straps loosely except the corner straps. (Picture 6)
21. Put the roof cover over the top of the top section frame, the roof cover will overlap the wall covers. Using the attached straps thread the straps through the holes on the corners of each wall and roof and tie the straps tight on the inside around the frame. (tying all straps in a tight knot) (picture 7)
22. Assemble the hinges on the right front wall vertical support bar and the assembled doorframe.
23. Attach the door cover to the assembled doorframe using the attached straps. Tie the straps tight on the inside. (tying all straps in a tight knot)
24. Tip the shooting house top section on to its side. The bottom of each wall will fold under the platform in between the platform plastic floor and the platform bases. Slip the bottom of the walls in-place and tighten the bolts to the platform and platform bases.


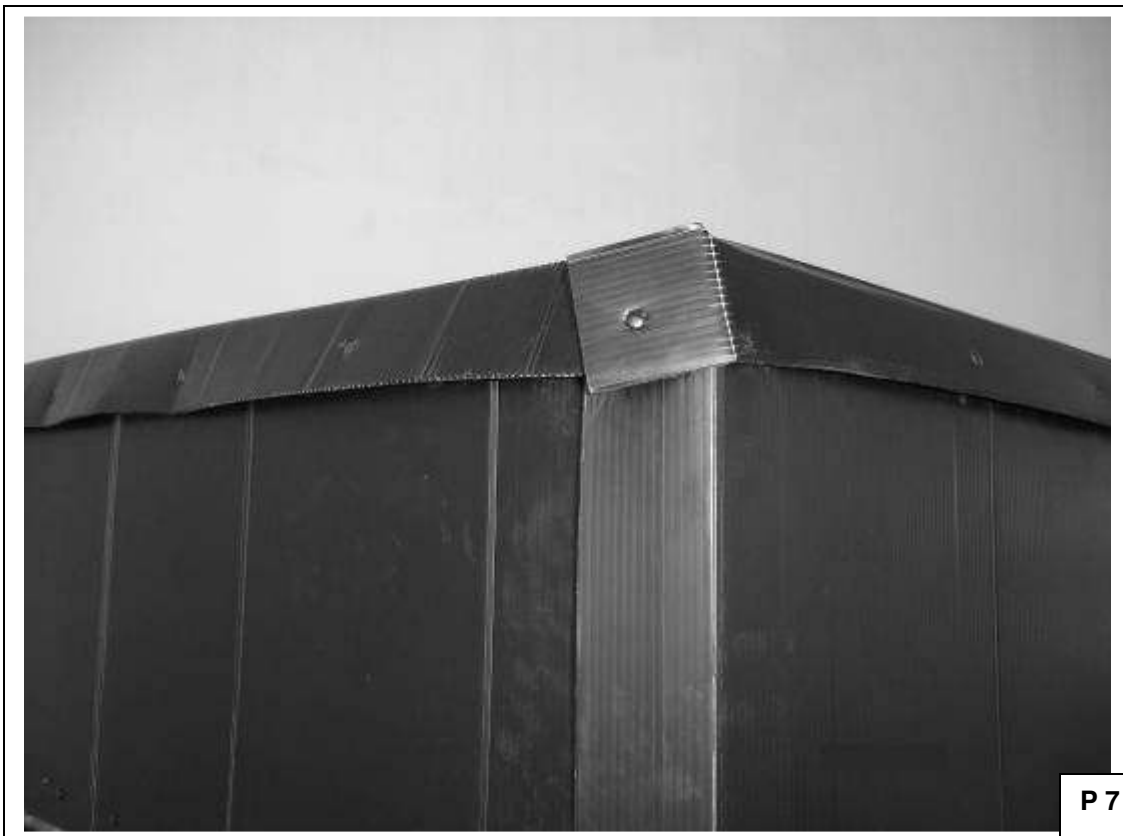


ASSEMBLY (leg section) AGT625

25. Assemble the four legs by laying out the two sections of each leg. Start with the bottom leg section (part# 826) and top leg sections (part# 828). Make sure that the tabs for the cross braces (part # 825) are at the bottom and top leg sections are facing into the inside. One top leg section will not have a cross brace tab. (refer to picture on page 2 of this instruction booklet)
26. Bolt the foot (part# 829) to the bottom leg sections (part# 826), using (4) 8mm x 2-inch bolts, (8) 8mm steel washers and (4) 8mm locknuts. The foot must face out and away from the cross braces on each leg. (picture 8)


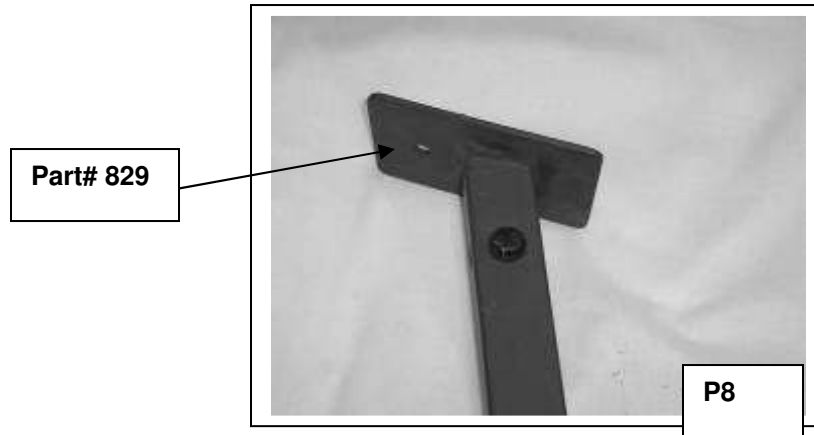


27. Assemble (2) leg bracket (part# 808) to three complete leg sections. (Do not assemble the top (part# 827 with out the cross brace tab) and bottom leg section. Butt together the leg sections together and align the holes in the leg sections with the first leg bracket. (picture 9 and 10)

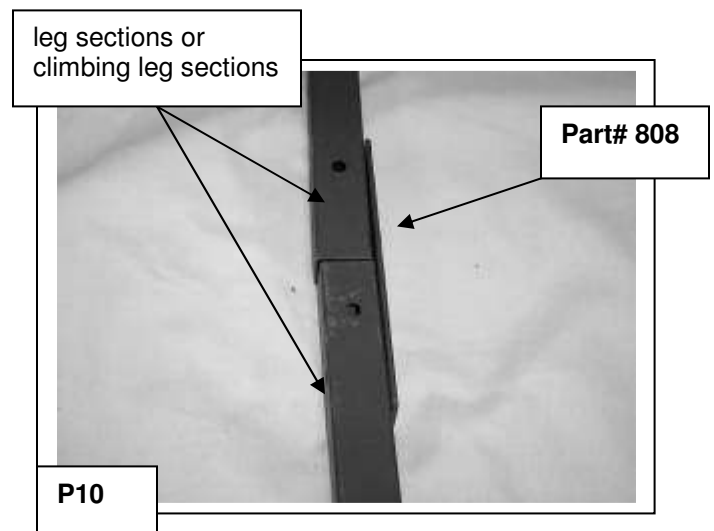
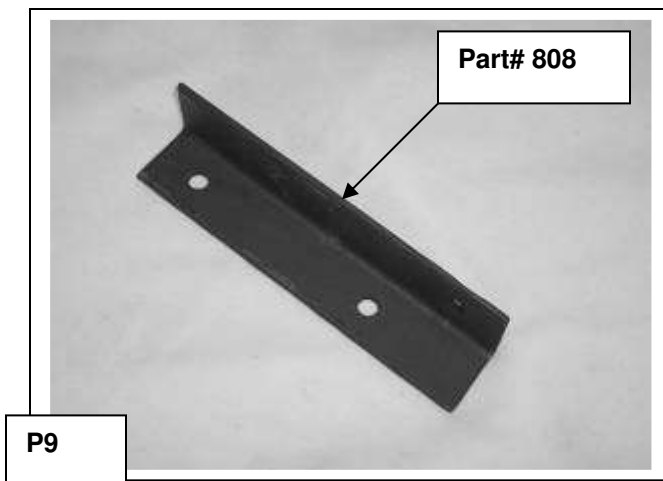


ASSEMBLY (leg section continued) AGT625

28. Finish assembling the (2) leg bracket (part# 808) to each leg sections, by aligning the holes in the leg sections with the first and second leg bracket. (picture 11)
29. Bolt together the (2) leg brackets and the two leg sections, using (4) 8mm x 2-1/4 inch bolts, (8) 8mm steel washers and (4) 8mm locknuts. (picture 12)
30. Assemble all legs together.

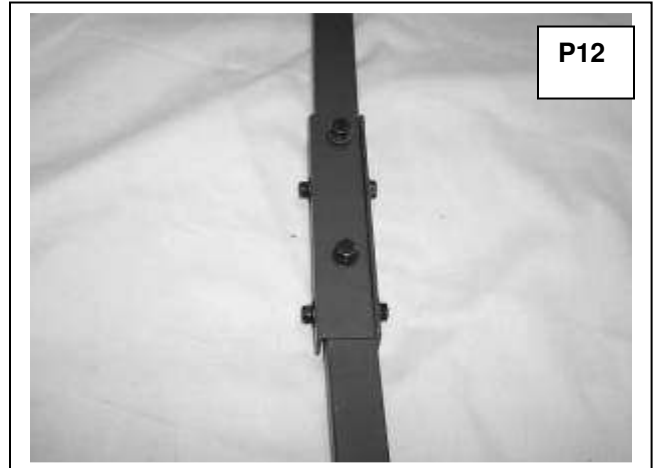
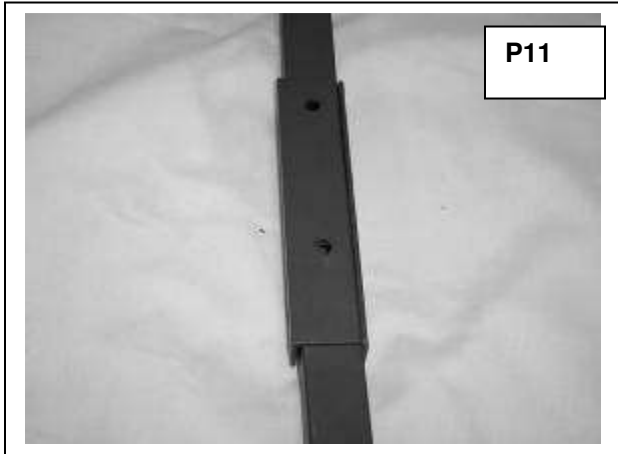


31. Tip the assembled top section on its side. With the three assembled legs, bolt them to the platform leg brackets. (do not bolt an assembled support leg to the left front platform leg bracket). Using (3) 8mm x 2 1/2 inch bolts, (6) 8mm steel washers and (3) 8mm locknuts. (refer to picture on page 2 of this instruction booklet)
32. Bolt the platform braces (part# 830) to the three assembled leg sections. (refer to picture on page 2 of this instruction booklet). Using (3) 8mm x 3 inch bolts, (6) 8mm steel washers and (3) 8mm locknuts.
33. Bolt the platform braces to the platform base. Using (3) 8mm x 3 inch bolts, (6) 8mm steel washers and (3) 8mm locknuts.
34. Bolt two cross braces (part# 825) (the bars are all the same length) together using (2) 8mm x 2-1/4 inch bolts, (4) 8mm steel washers and (2) 8mm locknuts. (picture 13 and 14)
35. Bolt the remaining (12) cross braces together using (24) 8mm x 2-1/4 inch bolts, (48) 8mm steel washers and (24) 8mm locknuts. (picture 13 and 14)

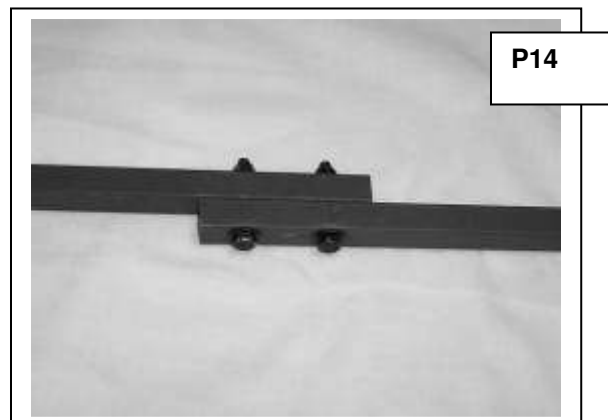
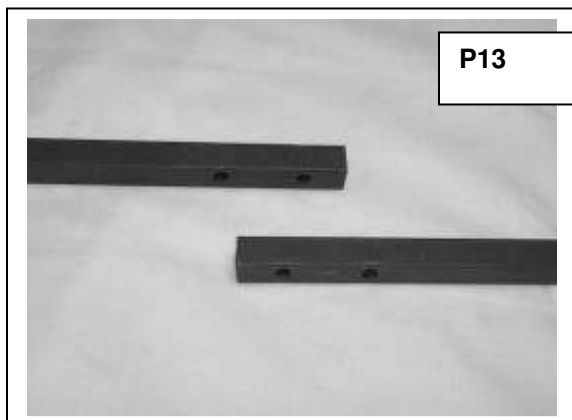


ASSEMBLY (leg section continued)
AGT625

36. Refer to the picture on page 2 of this instruction booklet. Bolt (4) assembled cross braces to the tabs between the bottom of two leg sections. Using (4) 8mm x 1 3/4 inch bolts, (8) 8mm steel washers and (4) 8mm locknuts. Where two cross braces are bolted to the same cross brace tab use (2) 8mm x 2 1/4 inch bolts, (4) 8mm steel washers and (2) 8mm locknuts. (picture 15 and 16)

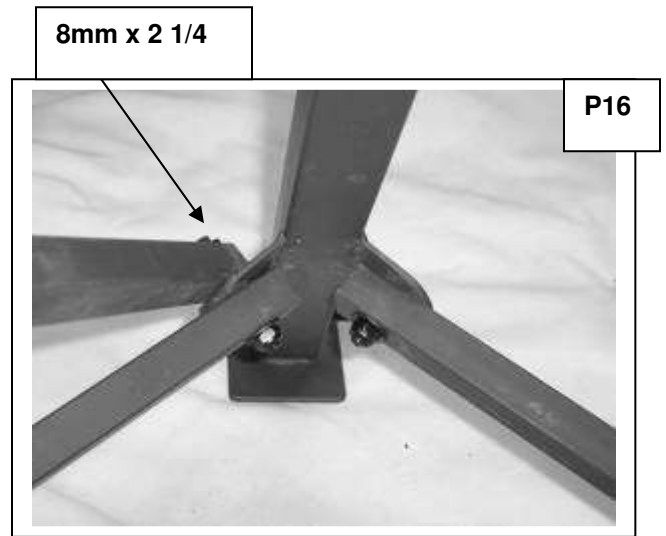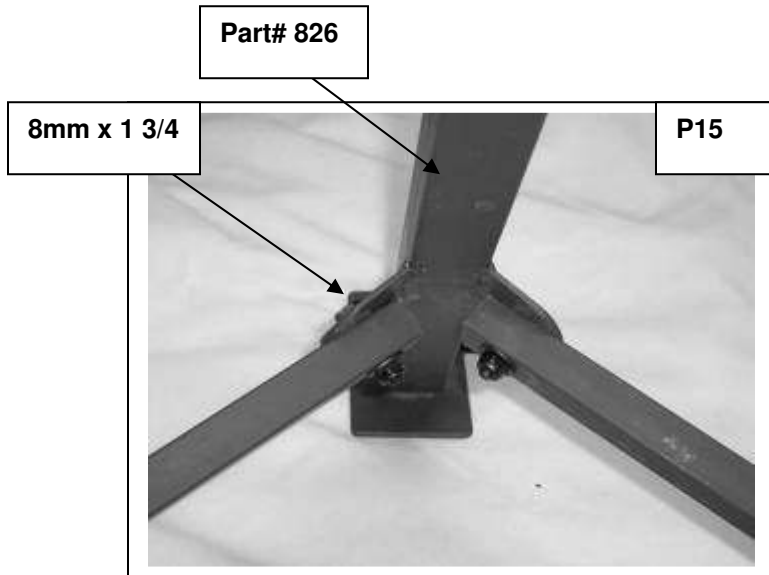

37. Refer to the picture on page 2 of this instruction booklet. Bolt two assembled cross brace to the tabs on the bottom and top leg sections. Using (2) 8mm x 1 3/4 inch bolts, (4) 8mm steel washers and (2) 8mm locknuts.

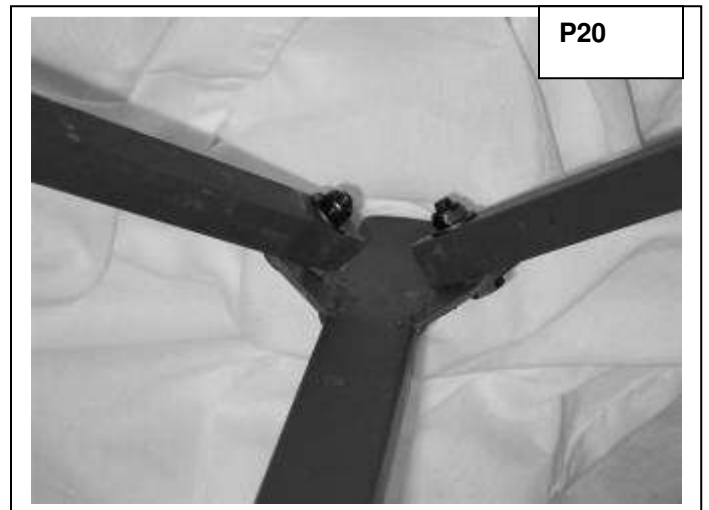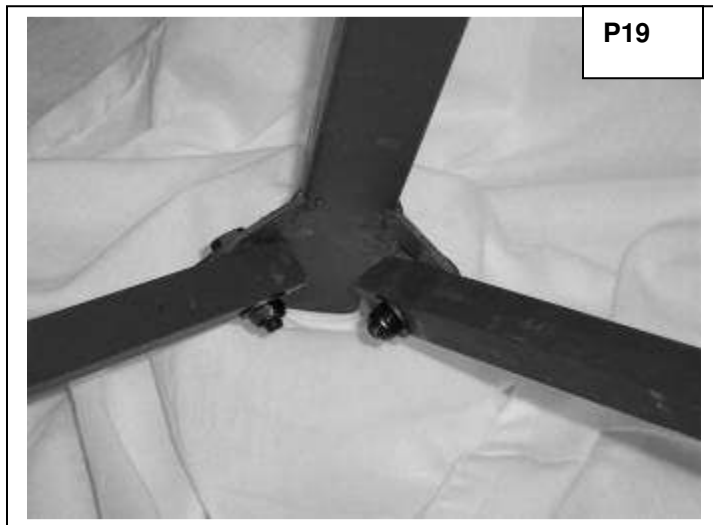

ASSEMBLY (leg section continued)
AGT625

38. With the shooting tower on three assembled legs lift the tower up and bolt the left front top leg section (part# 827) to the left front platform base tabs. Using (1) 8mm x 2 ½ inch bolts, (2) 8mm steel washers and (1) 8mm locknuts. (refer to picture on page 2 of this instruction booklet)
39. Bolt the platform brace to the left front top leg section and the platform base. Using (2) 8mm x 3 inch bolts, (4) 8mm steel washers and (2) 8mm locknuts.
40. Lift the tower up and bolt the left front bottom leg section (part# 826) to the left front top leg section. Using (2) leg brackets and (4) 8mm x 2 ¼ inch bolts, (8) 8mm steel washers and (4) 8mm locknuts. (refer to picture on page 2 of this instruction booklet)
41. Bolt all remaining (3) leg cross braces to the leg sections. Using (4) 8mm x 1 ¾ inch bolts, (8) 8mm steel washers and (4) 8mm locknuts. Where two cross braces are bolted to the same cross brace tab use (1) 8mm x 2 ¼ inch bolts, (2) 8mm steel washers and (1) 8mm locknuts. (picture 15 and 16)
42. Tighten all bolts and locknuts on the legs and cross braces.



Advanced Game Technology
6818 N. Frostwood Parkway
Peoria, IL 61615
(309) 691-2950
www.advancedgametechnology.com