



Model AGT715

Max. Capacity: 300 lbs.
300 pounds including 1- person and gear
Platform Size: 34 in. x 30 in.
Min. Tree Diameter: 12-inches
Seat Height: 19-inches

Congratulations on your purchase of an Advanced Game Technology Global treestand! The following information is included in your instructions.

- Safety and instructions
- Warnings
- Carton contents
- Assembly instructions
- Maintenance and care instructions

Warning

Maximum Weight Capacity: 300 lbs.

300 pounds including 1- person and gear

DANGER:

DO NOT use this treestand without a Full Body Fall Arrest System (FAS). Failure to wear a Full Body Fall Arrest System (FAS) could result in serious injury or death.

DO NOT use before reading and understanding the instructions included with this treestand.

DO NOT use your treestand while under the influence of medication, alcohol, or drugs or if you experience dizzy spells, heart problems, or have a fear of heights.

DO NOT use this treestand during inclement weather.

WARNING:

Before each use, always inspect this treestand for undue wear, deformity, corrosion or other visible damage.



ALWAYS: Test and practice using your AGT ladder treestand until you are comfortable and fully understand the proper use and installation of the AGT715 ladder treestand.

CARTON CONTENTS: AGT715

1	Rear Shooting Rail Bar	Part # 636
1	Seat Cushion w/backrest	Part # 637
2	Side Shooting Rail Bar	Part # 638
1	Front Shootingrail Camo Pad	Part # 639
1	Front Shootingrail Bar	Part # 640
1	Seat Frame	Part # 641
2	Seat Frame Support	Part # 642
2	Seat Frame Support Cross Brace	Part # 643
2	Tree Brace	Part # 677
2	Platform/Tree Brace Frame	Part # 644
2	Platform/Tree Brace Frame Support	Part # 645
2	Platform Section	Part # 646
3	5 ft. Sleeved Ladder Section	Part # 665S
2	16-ft. Ladder Stabilizing Straps	Part # 669
1	6-ft. Ratchet Strap System	Part # AAGH5
1	Full Body Fall Arrest System (FAS)	Part # FAS001

Hardware:

6	2-Inch Locking Pins	Part # 050
27	8mm x 2 1/2 Inch Bolts	Part # 002
9	8mm x 1 1/2-Inch Bolts	Part # 011
35	8mm Locknuts	Part # 003
70	8mm Steel washers	Part # 004
1	8mm Wing nut	Part # 013

Maintenance & Care

To ensure your safety, inspect your treestand before each use. Never use the treestand if damage is detected or suspected.

Regular maintenance by the user includes, but is not limited to the following:

Tightening or replacement of hardware (specified and supplied by the manufacturer).

Replacement of rope, straps, cables, etc. (specified and supplied by the manufacturer).

Advanced Game Technology Global, Inc., LIMITED WARRANTY

What This Warranty Covers:

Advanced Game Technology Global, Inc. treestand products are covered against defects in workmanship and materials for a period of one (1) year from the original date of purchase.

Advanced Game Technology Global, Inc. will replace without charge any original part determined by Advanced Game Technology Global, Inc. to be defective under the terms of this warranty.

What This Warranty Does Not Cover:

Lost parts; accidents; malfunctions caused by alterations, improper installation, use of unauthorized parts or attachments; damages due to abuse/misuse; normal wear; excessive wear caused by owners neglect; or products that are put to commercial/rental use.

Statement of Liability

It is expressly understood that Advanced Game Technology Global, Inc's., liability for its products, whether due to breach of warranty, negligence, strict liability, or otherwise, is limited to the repair or replacement of any defective parts within the one (1) year time limit mentioned above. Advanced Game Technology Global, Inc. is not liable for any injury or expense, whether direct or consequential, including but not limited to loss of use, income, profit or damage to material arising in connection with the sale, installation, use of, inability to use, or the repair or replacement of Advanced Game Technology Global, Inc., products. Advanced Game Technology Global, Inc., reserves the right to make alterations or modifications in its products at any time, which in its opinion may improve the performance and efficiency of the product. It shall not be obligated to make such alterations or modifications to products already in service.


Advanced Game Technology Global, Inc. treestands are delivered by Advanced Game Technology Global, Inc., with the understanding that Advanced Game Technology Global, Inc. assumes no responsibility for its resale or safe use.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. You should check the State Laws to see if they apply.

Model: AGT715 Ladder Treestand

Max. Capacity: 300 lbs.

300 pounds including 1- person and gear

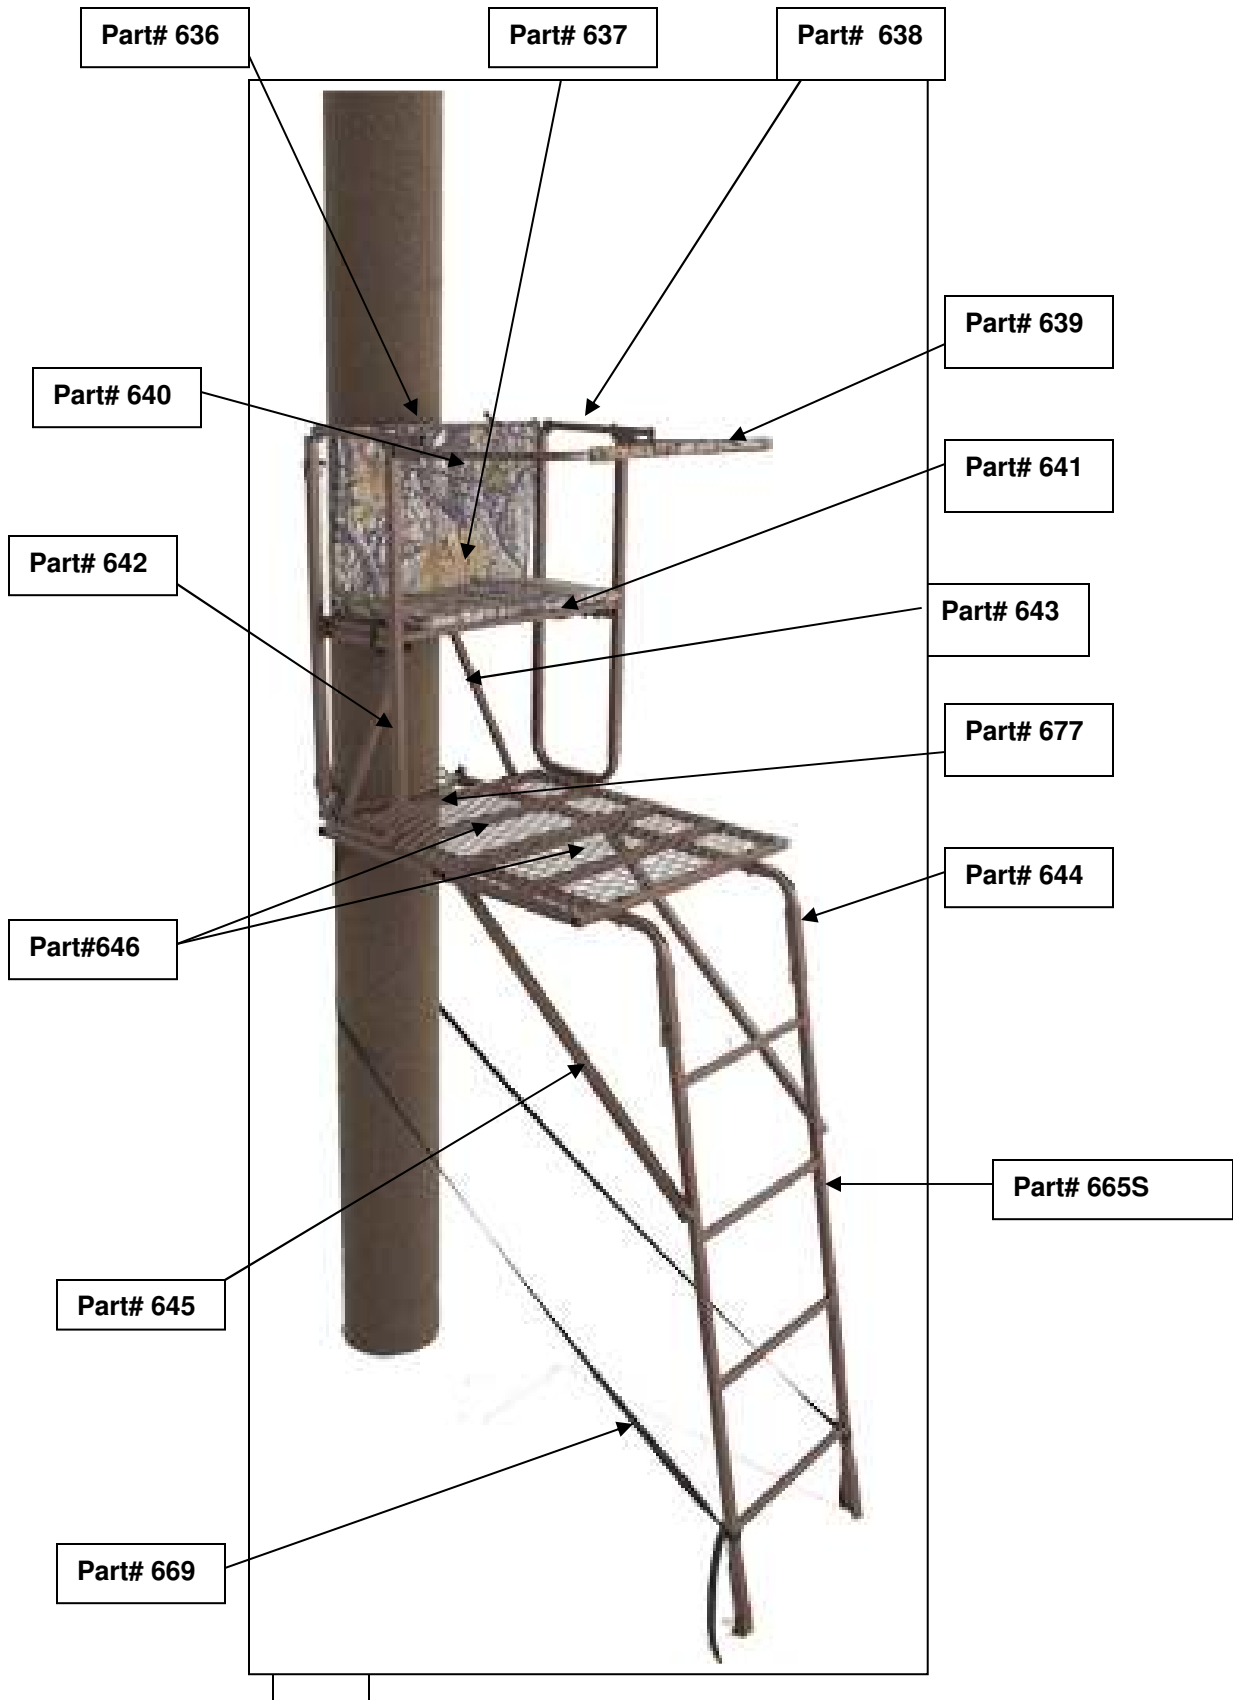

ASSEMBLY AGT715

1. To assure that all parts will fit together when assembling the top section of the ladder treestand, hand-tighten all locknuts and bolts.
2. Bolt together the 2-platform sections together (part# 646), using (4) 8mm x 2 1/2 inch bolts, (8) 8mm steel washers and (4) 8mm locknuts. (picture 1)
3. Attach the (2) platform/tree brace frames (part# 644) to the underside of the platform sections, using (8) 8mm x 2 1/2 inch bolts, (16) 8mm steel washers and (8) 8mm locknuts. (picture 1)
4. Attach the (2) seat frame supports (part# 642) to the rear platform, using (4) 8mm x 2 1/2 inch bolts, (8) 8mm steel washers and (4) 8mm locknuts. (picture 1)
5. Attach the rear shooting rail bar (Part # 636) to the back two bars of the seat frame supports, using (2) 8mm x 1 1/2 inch bolts, (4) 8mm steel washers and (2) 8mm locknuts. (picture 1)
6. Attach the seat frames (part# 641) to the seat frame supports, using (4) 8mm x 2 1/2 inch bolts, (8) 8mm steel washers and (4) 8mm locknuts.
7. Attach the seat frame supports (part# 643) to the rear of the seat supports and the rear platform, using (3) 8mm x 2 1/2 inch bolts, (6) 8mm steel washers and (3) 8mm locknuts. (picture 1)
8. Attach the side shooting rail bars (part# 638) to the seat frame supports, using (4) 8mm x 1 1/2 inch bolts, (8) 8mm steel washers and (4) 8mm locknuts. (picture 1)
9. Attach the front shooting rail bars (part# 640) to the outside of the side shooting rail bar using (2) 8mm x 1 1/2 inch bolts, (4) 8mm steel washers and (2) 8mm locknuts. (picture 1) Attach the front shooting rail camo pads to the front shooting rail.
10. Insert the top of a ladder section into the two platform/tree brace frame and secure with 2-locking pins.
11. Attach the platform/tree brace frame supports (part# 645) to the inside of the rear platform and outside of the ladder section, using (4) 8mm x 2 1/2 inch bolts, (8) 8mm steel washers and (4) 8mm locknuts. (picture 1)
12. Using the sewn straps to secure the seat cushion to the seat frame and rear shooting rail bar.
13. Tighten all locknuts and bolts securely.

Set-up instructions

AGT715

WARNING: Raising the ladder stand requires at least two people.

1. Attach the two 16' ladder-stabilizing straps on each side of the platform tree brace. Wrap the loop end of the strap around the rear platform bar and thread the strap through the loop. Pull the strap tight.
2. Insert the remaining two ladder sections together; secure all sections using (4) locking pins.
3. With the ladder stand assembled, position the bottom ladder section 3 to 4 feet away from the base of the tree. Stand the ladder stand up against the tree so that the tree brace on the back of the platform sets securely against the tree.
4. Level the platform by moving the bottom ladder in or out from the base of the tree. Step on the bottom ladder rung to set the ladder in the ground.
5. Attach the adjustable ladder support (part # 679) to the fifth ladder rung, Insert one 8mm x 1-1/2 inch bolt through the hole in the adjustable ladder support and secure with a wingnut to the ladder rung.
6. Secure the strap to the adjustable ladder support by threading the adjustable ladder support through the loop on one end. Wrapping the strap around the tree and tie it to the adjustable ladder support. Make sure the strap is tight and the ladder support is secure to the tree.

WARNING: Make sure that the adjustable ladder support is up against the tree and the strap is tight. Failure to attach the adjustable ladder support properly could cause the ladder to fall.

7. Take one of the 16' ladder stabilizing straps that is attached to the rear platform frame. Walk the strap around the tree crossing at the back of the tree and tie it to the ladder rung that the ladder support is attached. Repeat with the other 16' ladder stabilizing strap, crossing the strap behind the tree. The two 16' ladder-stabilizing straps will help hold the top section of the ladder stand secure to the tree as you climb the ladder to secure the ratchet strap around the tree.
8. Attach the ratchet strap to the rear platform bar on each side of the tree brace. Ratchet the strap tight, for proper threading refer to the ratchet strap instructions.
9. To remove the ladder stand reverse the set-up process. The ladder stabilizing straps may need to be retightened to secure the ladder stand to the tree before losing the ratchet strap. **NEVER** remove the ladder stabilizing straps before removing the ratchet strap.


AGT recommended that you lubricate all hardware annually or as needed. It is recommended that you replace all hardware, chains, and cables on your tree stand with AGT replacement parts every three years.

You must replace all straps annually. Use only AGT replacement straps.

Never modify you tree stands. Modifications will void the warranties and relieve Advanced Game Technology Global Inc. from all liabilities.

Ratchet Strap Threading Instructions

1. Close the ratchet so the strap slot is accessible to thread the strap through. Insert the strap through the slot; the strap must be pulled tight before the ratchet can be secured. (picture 1 and 2)

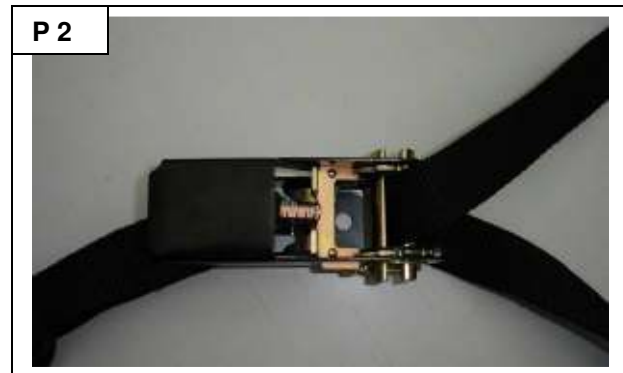

WARNING: You must pull the strap through the ratchet tight before you use an open and close ratchet method to tighten the strap securely.

WARNING:

You must check all straps for proper threading. Refer to the instruction for each individual strap.

WARNING:

Before each use, always inspect this treestand for undue wear, deformity, corrosion or other visible damage. It is recommended that you replace all hardware (locknuts, wingnuts, bolts and support cables) every three years and (support straps) annually. It is recommended that you lubricate all hardware as needed or at least annually.

WARNING:

You must replace all straps every year; use only Advanced Game Technology Global, Inc. replacement straps. The use of any other straps will be viewed as a modification to the stand. Modifications will void the warranties and relieve Advanced Game Technology Global, Inc. from all liabilities.



Advanced Game Technology
8915 N. Pioneer Road
Peoria, IL 61615
(309) 691-2950
www.advancedgametechnology.com